پارسه
تجهیز
رادمهر
شماره ثبت :
۴۸۵۹۹۴

Elevator

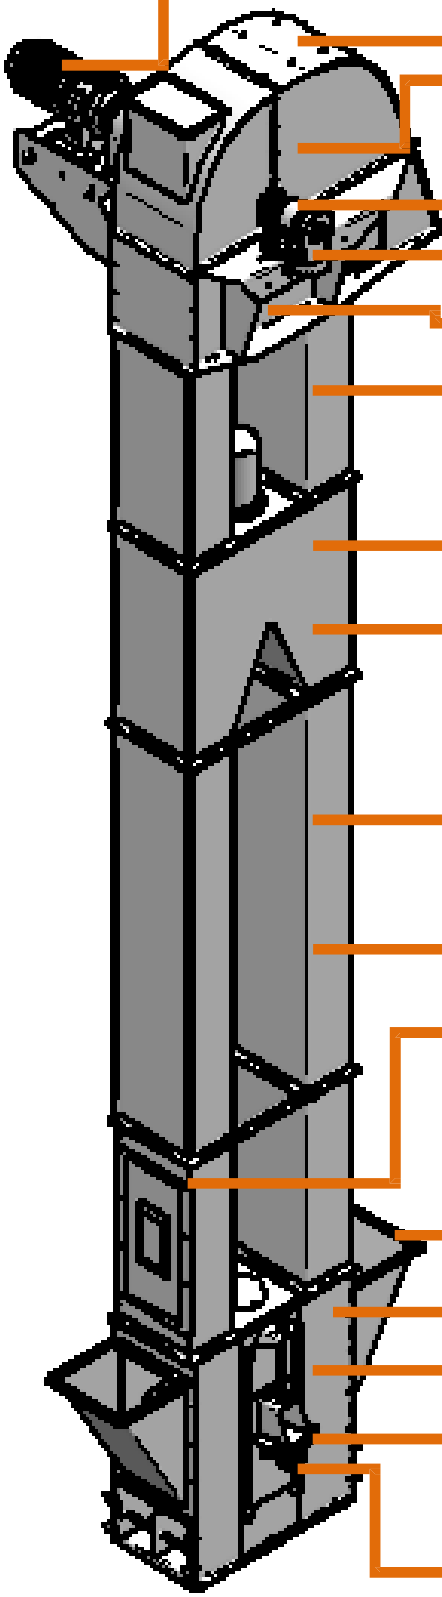

1.Driving part

2.Head up cover

3.Head pulley

4.Head bearing& sealing

5.Back-stop

6.Head basement

7.Height-adjustpart

8.Balance part

9.Switch of deflection part

10. 2m body part

11.Body part

12.Checking part

13. Take in part

14.Cover of basement

15.Tail pulley

16.Speed sensor

17.Bearing&sealing of basement

18. Speed sensor

19. Bearing & Sealing basement